




- MAHOGANY
- MAPLE
- 1/4" PLYWOOD

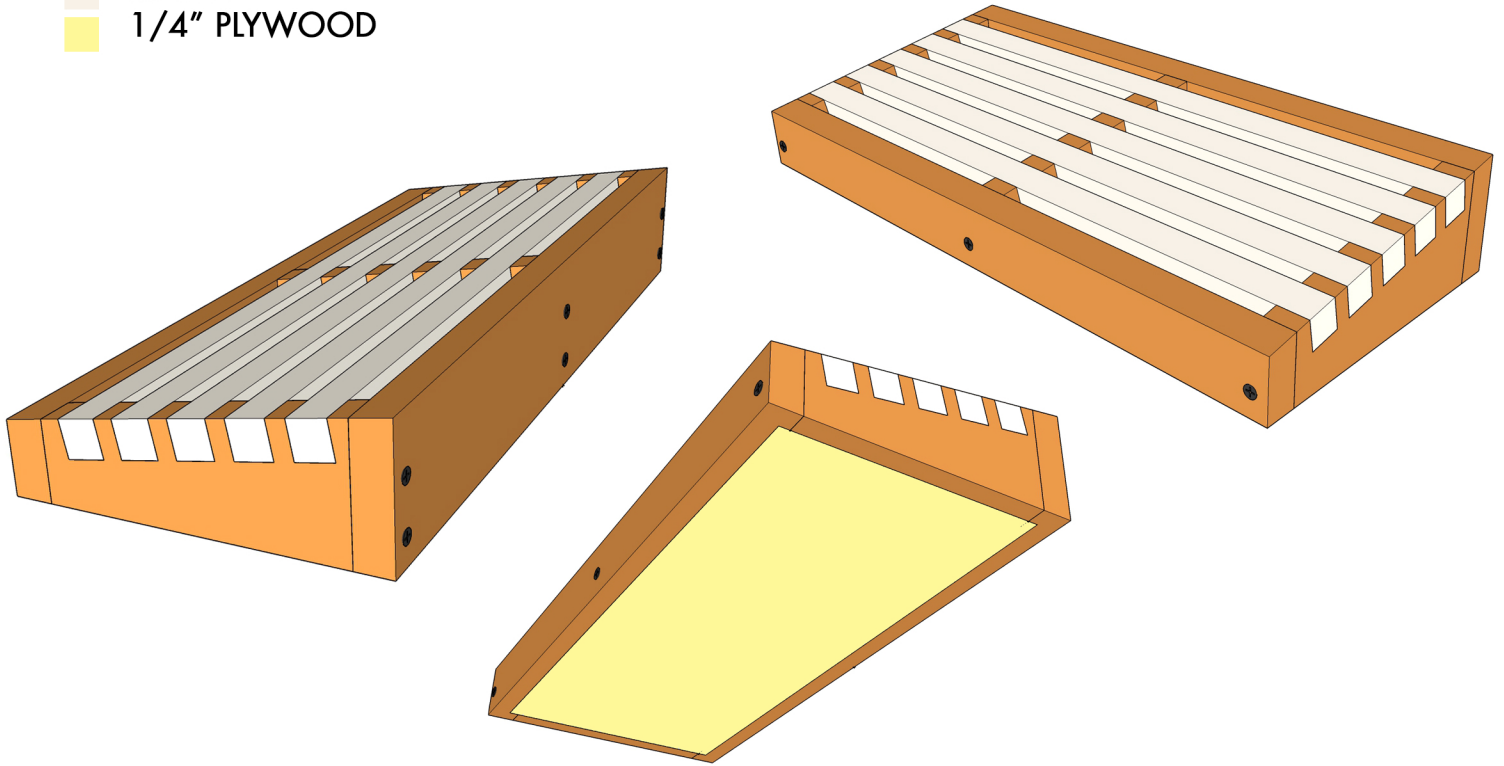

Not Shown: Drill a hole in the bottom plywood for routing power adapter cable. Add 4 rubber feet and a handle to the back. Use small screws to attach plywood. Round over the edges, counter-sink the screws and add wood plugs for a cleaner look.

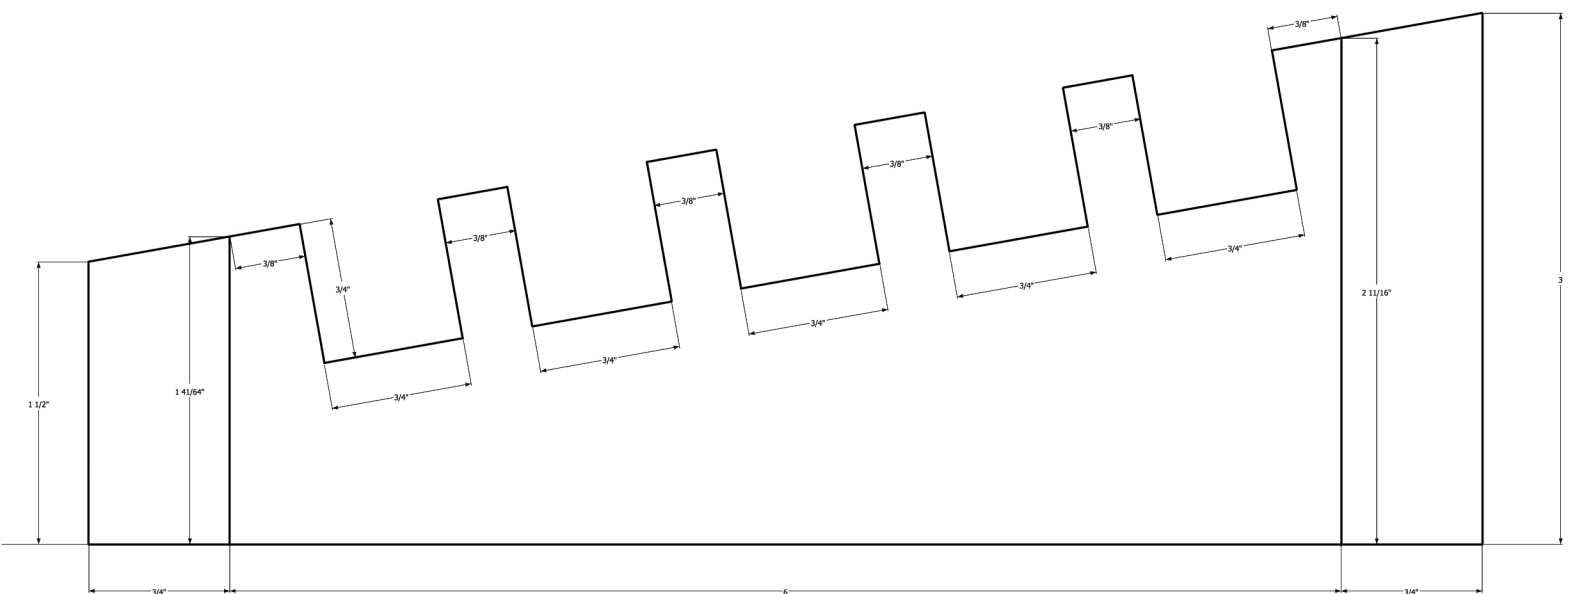

DIMENSION DETAIL

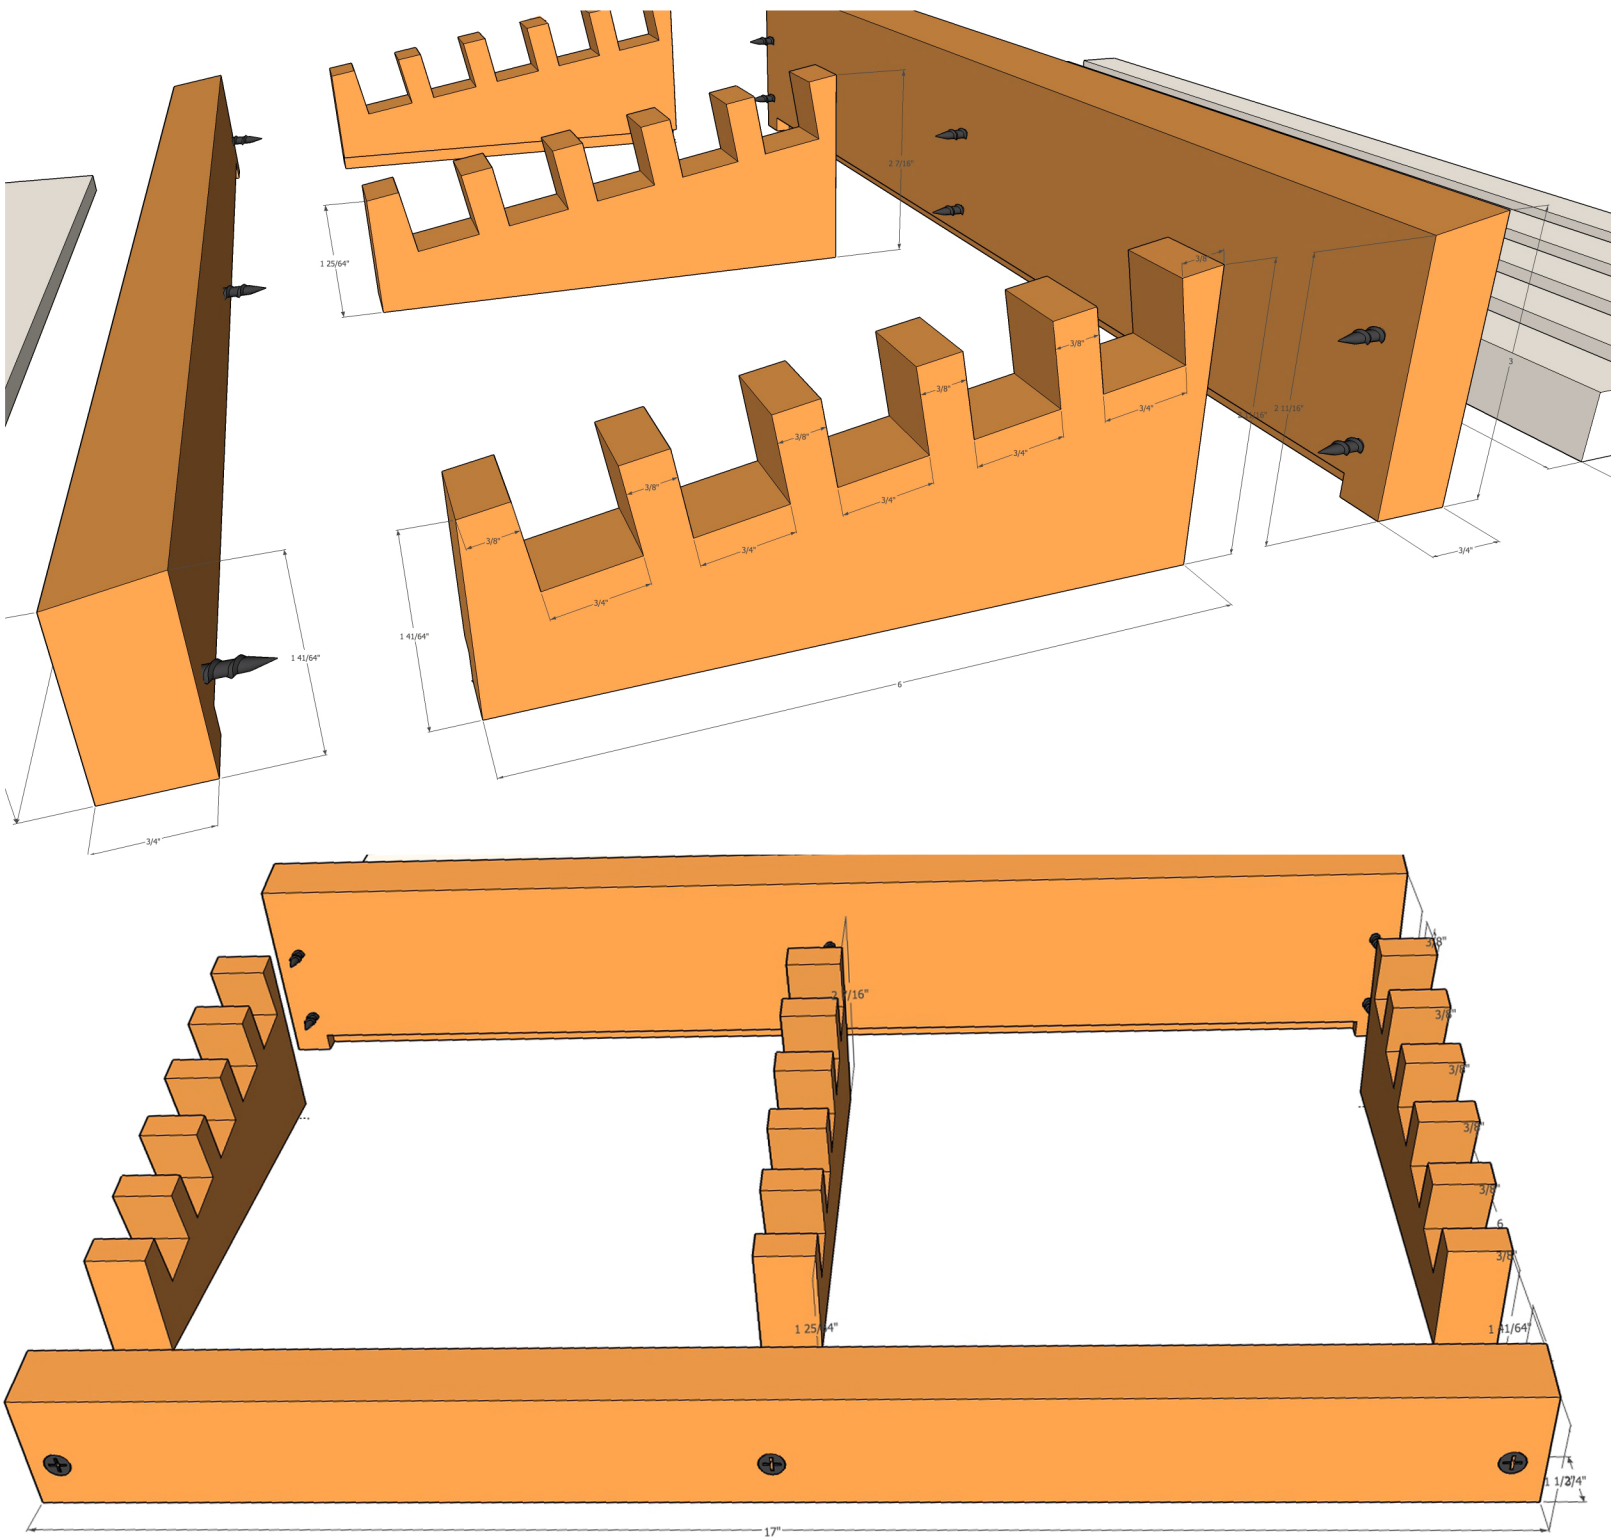

ROUTING DETAIL

